


# MODERN CANOPY ASSEMBLY INSTRUCTIONS

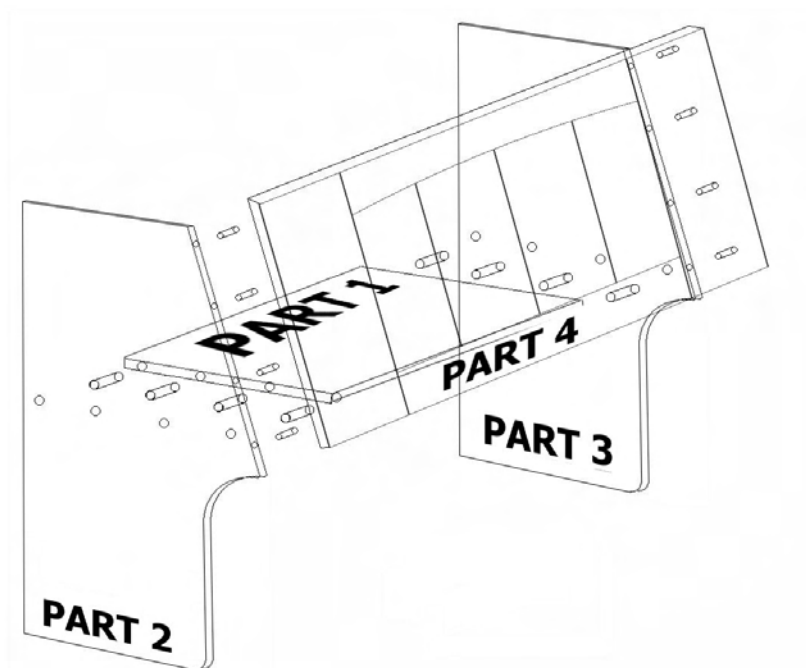

**Pack Includes**    16 no. Dowels.  
                          2 no. 12 ml Glue.

- Step 1.**    Insert Glue & 8 Dowels in Part 1
- Step 2.**    Insert Glue & 8 Dowels in the edges of Parts 2 & 3
- Step 3.**    Connect Parts 1,2 and 3 firmly together.
- Step 4.**    Connect Part 4 to parts 2,3 firmly together.