


# TOILET SEAT ASSEMBLY INSTRUCTIONS



## Pack Includes

- 2 Double Hinges (H1).
- 2 Threaded Bars & Wing Nuts.
- 2 Metal, Plastic & Rubber Washers.
- 4 60x23mm Buffers (P2).
- 2 20mm Round Buffers (P1).
- 18 18mm Raised Countersunk Screws

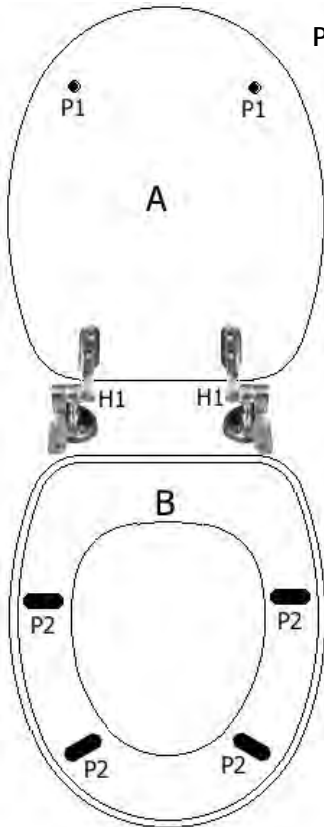

- Step 1. Screw 20mm Round Buffers (2xP1) Onto Piece A
- Step 2. Screw 60x23mm Buffers (4xP2) Onto Piece B
- Step 3. Screw Hinges (2xH1) Onto Piece A  
(NOTE: Long Legs on the Inside)
- Step 4. Screw Hinges Onto Piece B
- Step 5. Screw Threaded Bars onto Hinges (2xH1)
- Step 6. Align Threaded Bars With Toilet Holes by loosening screw on underside of hinge.  
(Remember to tighten after aligning)
- Step 7. Use Plastic Spacer Between Hinge and Toilet
- Step 8. On the underside of Toilet Use the Rubber then The Metal Washer and Screw Tight with Wing Nut.