


TRIPLE MIRROR ASSEMBLY INSTRUCTIONS

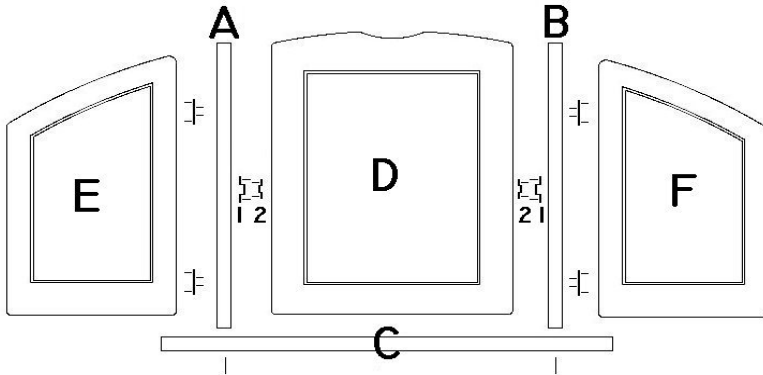

- Pack Includes**
- 4 Butt Hinges**
 - 2 Sets Swivel brackets (2 Pieces per set)**
 - 4 Zinc Screws 45mm x 3.5mm**
 - 24 Brass Screws 16mm x 3mm**

- Step 1.** Screw swivel brackets part 1 to part A & B. Use 4 x 16mm screws.
- Step 2.** Screw part C to parts A & B using 4x 45mm Screws.
Square edge to back.
- Step 3.** Screw swivel brackets part 2 to D use 4 x 16mm Screws.
- Step 4.** Align part D into place slotting swivel brackets into position.
- Step 5.** Screw the 4 butt hinges to parts E & F.
Take care to align the hinges holes correctly and that the joint of the hinges faces towards the front. Use 8x 16mm Screws.
- Step 6.** Fold wings part E & F Forward & screw hinges to posts parts A & B
Using 8x 16mm Screws